


19T
4050


Peugeot Rifter L1 Md.2018 Toyota Proace City L1 Md.2020

Side bar 51 mm short
Flankenschutzrohr 51 mm kurz
Côté bar 51 mm court

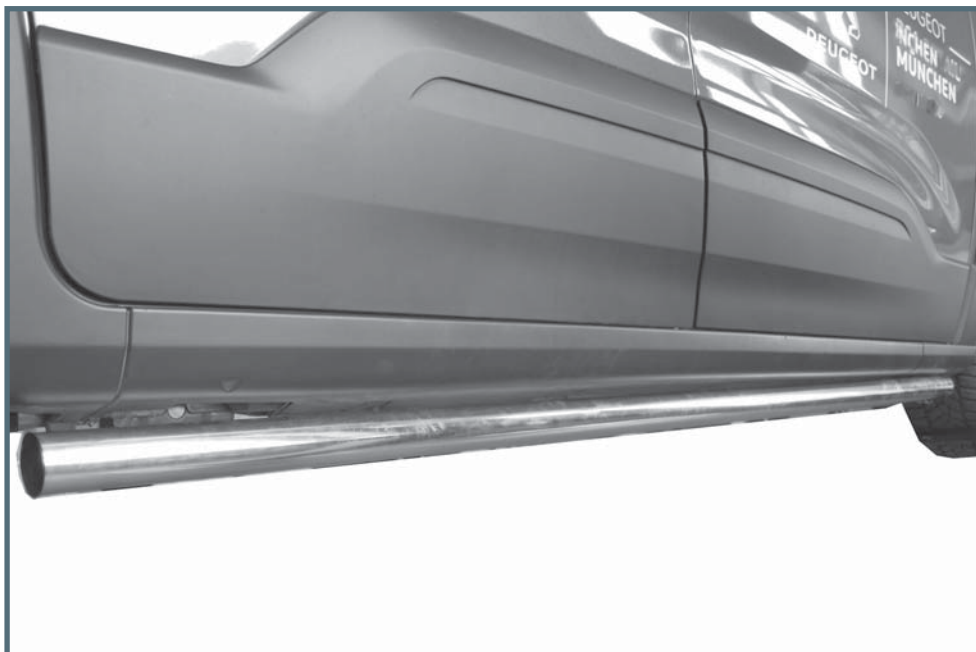

ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

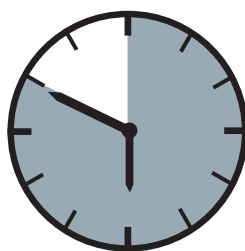


50 Minuten

article no.:
19T4050 (S) inox
19T5050 black steel


Revision 3: 25.08.2020



M8 (A2):
21,4 Nm
M8:
25 Nm



13



19T4050.1 / 19T5050.1

1



2x

mounting kit: 19T9050

	M8x40; DIN 933 Zn	4x
	M8x25; DIN 933 A2	4x
	M8; DIN 934 Zn	10x
	SW 13	4x
	Ø 8,4; DIN 125 Zn	4x

2

14S5033



M8

2x

3

10W5080



M8

2x

4

19T5031_R / 19R5032_L



2x



5

19T5029_R / 19T5030_L



2x

6

19T5094



4x

7

005498



Ø9 A2

4x


8

005497



Ø9

10x

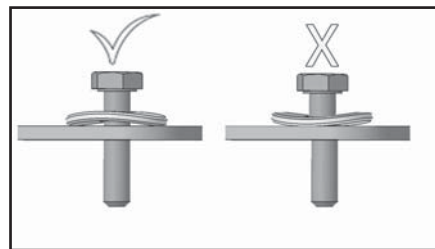

article no.:

19T4050 (S) inox

19T5050 black steel

Revision 3: 25.08.2020



