



GB	Fitting Instructions:	SIDESTEP
D	Montageanleitung:	TRITTBRETT
NL	Montagevoorschrift:	SIDE STEP
F	Instructions de montage:	MARCHE-PIEDS
E	Instrucciones de montaje:	JUEGO PROT. DE PARA. TRASERA
I	Schema di montaggio:	PEDANE LATERALI
S	Manual:	SIDOFOTSTEG
RUS	РУКОВОДСТВО ПО МОНТАЖУ:	СТУПЕНИ

VW Amarok 2010→



Type Nr.: 2H/6 Ausf.: A; Ausf.: B
Best.-Nr.: VW 1330; 1316




60 Min.



All rights reserved to modify the text

Type Nr.: 2H/6 Ausf.: A; Ausf.: B

Required tools / Benötigte Werkzeuge / Benodigde werktuigen / Outillage requis Herramientas necesarias / Utensile necessarie / Verktyg somsomkrävs / Необходимые инструменты

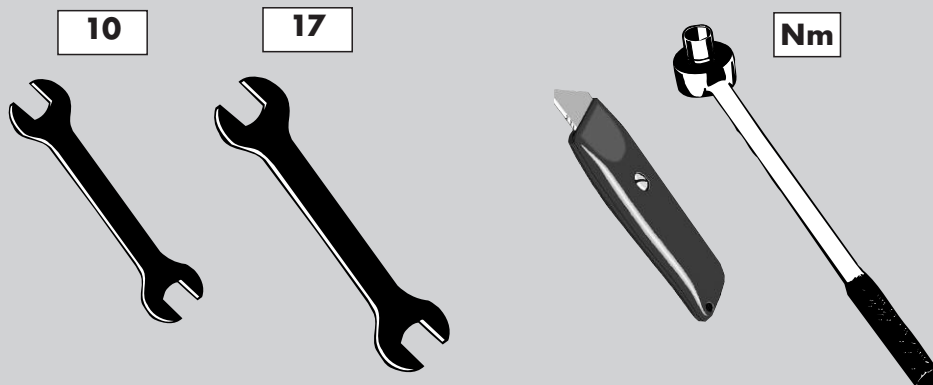

COBRA
TECHNOLOGY & LIFESTYLE

■ Fitting Instructions: SIDESTEP
 ■ Montageanleitung: TRITTBRETTETTER
 ■ Montagevoorschrift: SIDE STEP
 ■ Instructions de montage: MARCHÉ-PIEDS
 ■ Instrucciones de montaje: JUEGO PROT. DE PARRA. TRASERA
 ■ Schema di montaggio: PEDANE LATERALI
 ■ Manual: SIDOFOTSTEG
 ■ РУКОВОДСТВО ПО МОНТАЖУ: СТУПЕНИ

VW Amarok 2010→

Type Nr.: 2H/6 Ausf.: A; Ausf.: B
Best.-Nr.: VW 1330; 1316

TÜV
60 Min.
All rights reserved to modify the text

Parts list / Teileliste / Onderdelenlijst / Liste de pièces / Lista de accesorios
Lista di pezzi / Artikel lista / Список частей

1		2 x
2	Front/Rear	4 x
3	Front	2 x
4	Middle	2 x
5	Rear	2 x
6	M 10	2 x
7	M 10	2 x
8	M 10	2 x
9	M 10 x 25	2 x
10	M 10	4 x
11	ø 10,2	6 x
12	M 6	20 x
13	ø 6,4 x 20	8 x
14	ø 6,4	12 x
15	M 6 x 12	20 x

Type Nr.: 2H/6 Ausf.: A; Ausf.: B

